MIDMARK®

# Installation Instructions

## 002-0701-XXX-XXX Upholstery Kit for Model 317-001 (Serial Number Series KM)

### MOUNTING HARDWARE

| Part Number | Description | Qty. |
|---|---|---|
| 016-0175-00 * | Knob, Headrest | 1 |
| 051-0808-00 * | Bar, Headrest | 1 |
| 040-0010-46 * | Screw (Arm) #10-24 x 1/2" | 4 |
| 040-0010-51 * | Screw (Headrest) #10-24 x 1" | 4 |

* Parts Packaged with Chair

### 1

**A.** Place the back / seat cushion in position on the chair.

**B.** The clear vinyl foot cover is held in position by velcro strips.
If not installed, place the cover on the foot cushion.

**C.** Place the foot cushion in position on the chair.

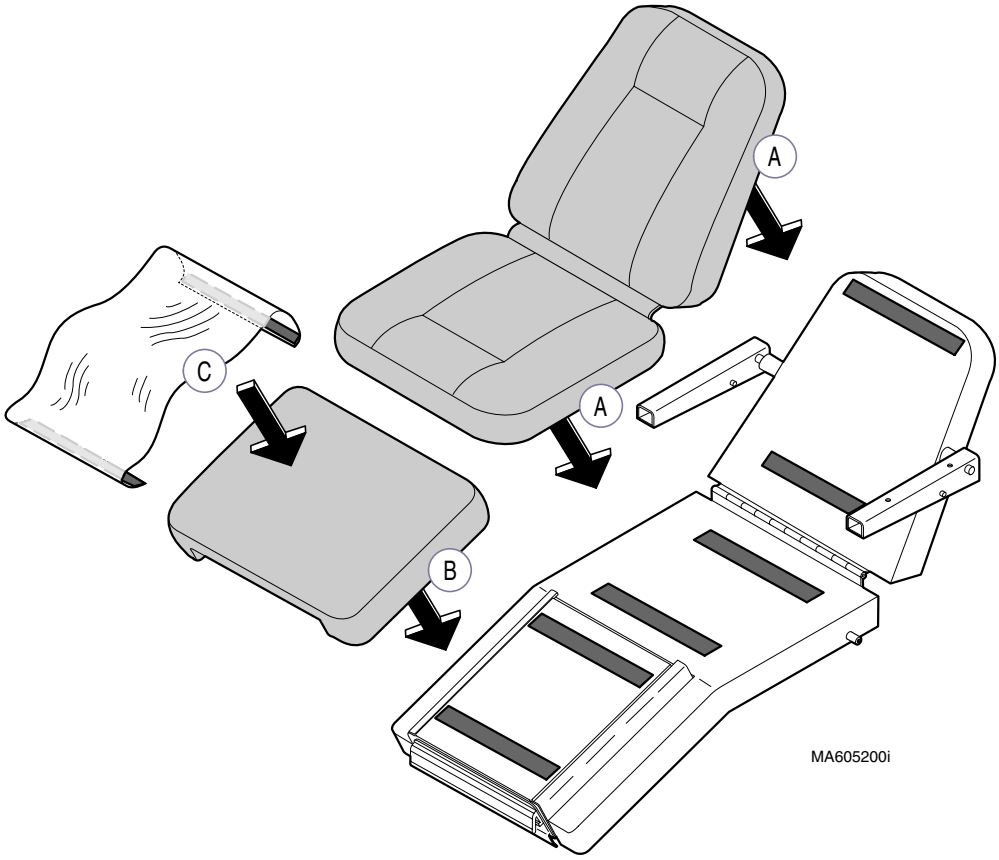


© Midmark Corporation - 2000

## 2

**A.** Remove the arm cover.

**B.** Place the appropriate (right or left hand) arm cushion in position and secure with #10-24 x 1/2" screws.

**C.** Install the arm cover with the #6-20 x 3/8" screws.

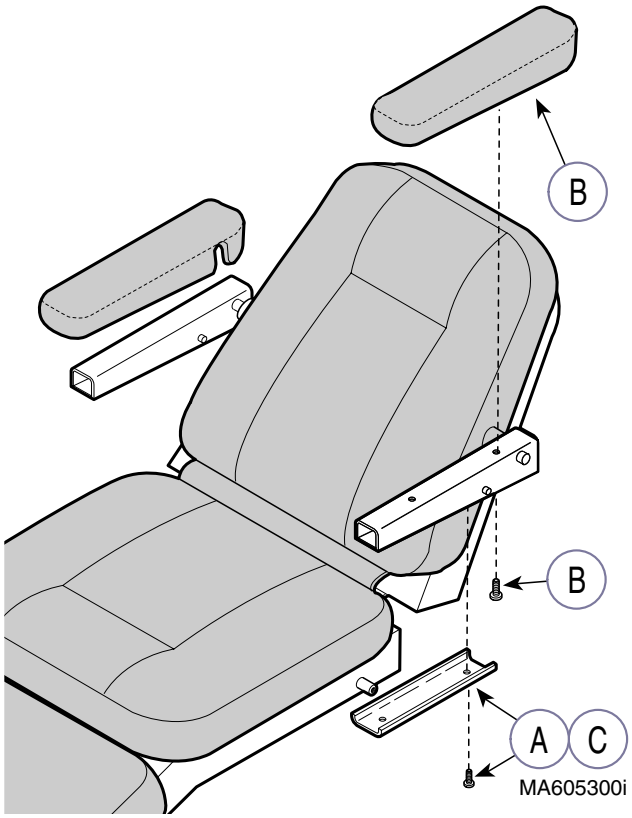


## 3

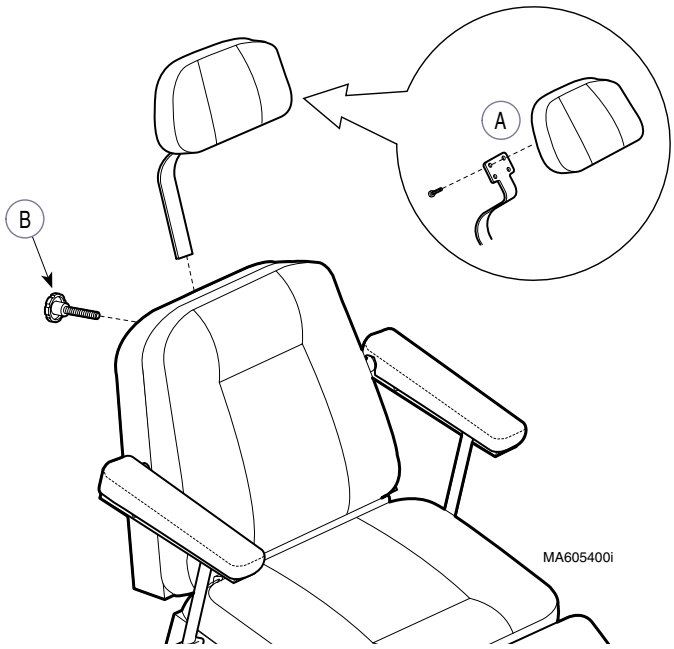


**A.** Secure headrest to the headrest bar with #10-24 x 1" screws.

**B.** Insert bar through opening in end of back cover and install knob.

## 4

**A.** Flex the color insert panel and place it in position.

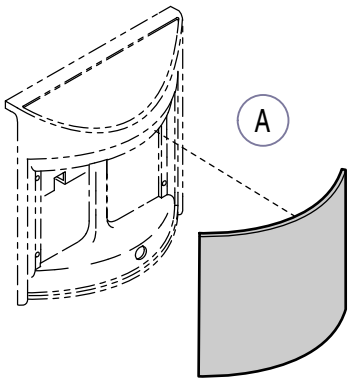


MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542



© Midmark Corporation - 2002